



Spot UV (Scodix)

How to design and create Spot UV files


Create a new colour swatch. Change the colour type to **Spot** and name the swatch **Scodix**. Choose a colour that enables you to easily identify Spot UV elements, eg. **100% Magenta**.

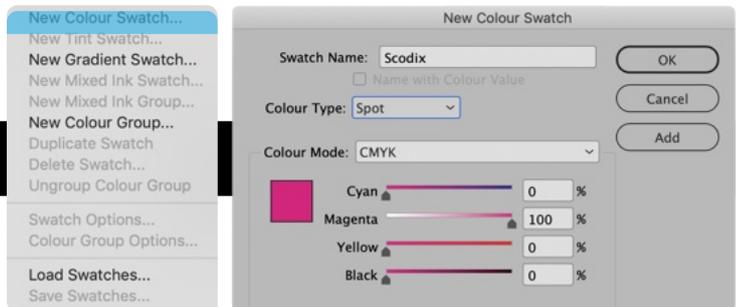


Duplicate the pages you'd like to add Spot UV to, select elements you want to enhance and colour them with the Scodix swatch.

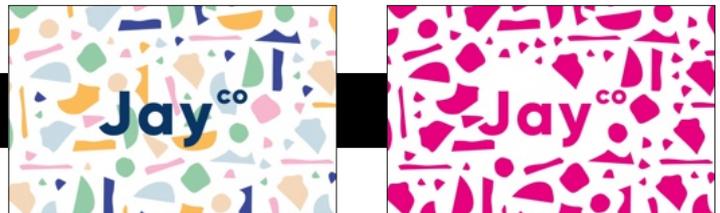

You can vary the build height of elements by adjusting the opacity. For the best result, we recommend **20% for low build** areas and **100% for high build**.

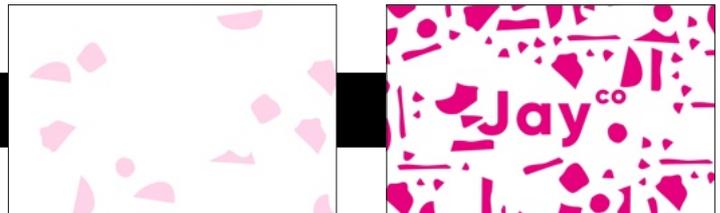

Leave a **2mm clear area** around the edge design and fold areas. This is required to avoid cracking when cut by the guillotine.

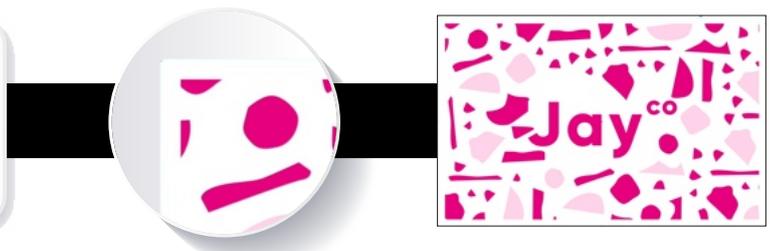

Supplied PDF must contain both print and Spot UV elements as a single file. (Example below)




Page 1: **Front**



Page 2: **Back**



Page 3: **Spot UV**



Page 4: **Blank**